


# SLIDE-DOWN


## QUICK GUIDE – CONSTRUCTION WITH SIDE PROFILE S-7

To preserve the slim design of the S-7 side profile, the profile itself does not have a built in duct to hold the end cap. A gap to fit the end cap must be created by shortening the top sign row by 4 mm, please see instruction below.

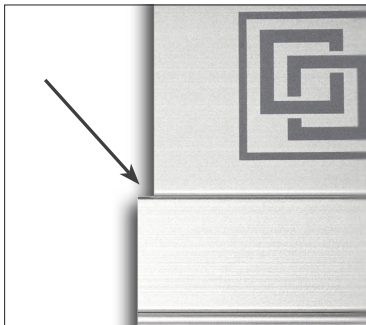

Shorten the top sign row (double-sided profile) by a total of 4 mm.

Stack the constructions all sign rows in to the slide-down frame by sliding them down the grooves of the side profiles.

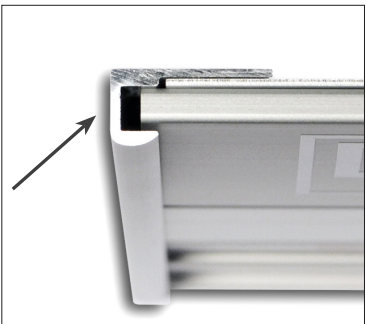

NOTE. The shorter sign row on top.

Finally insert the S-7 end caps in the gaps between the side profiles and the shorter top sign row, on both sides.



Profile S-7 end caps